





The WTP operator's (easy) guide to getting summer-ready

1

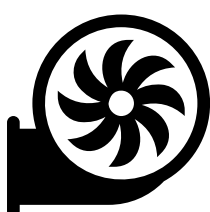


If you have surface water / raw water reservoirs, start your de-strat equipment up now. This will help you to avoid roll-overs caused by rain (and help you avoid fish kills, algae blooms and poor water quality).

2

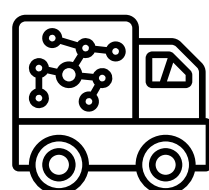


Order extra chemicals to plan ahead for extra consumption/service interruption.

3

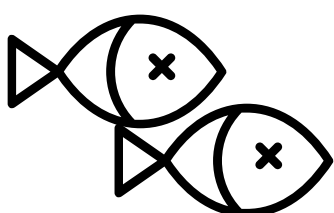

Be ready for fish kills and prepare to harvest them so they don't disturb the general public. (Destratification will help to prevent this from happening!)

4

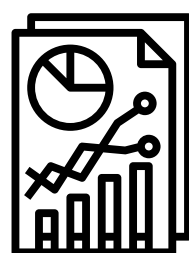


Do more regular testing to see (and allow you to deal with) changes to water quality. Consider putting an algae management plan together.

5



Dose powdered Bentonite or katon to help stabilise upset clarifiers.

6

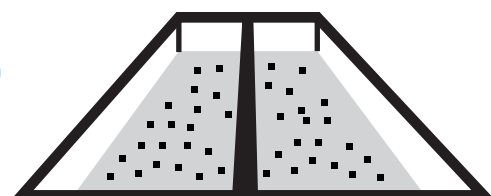

Think about refreshing the sand in your sand filter.

7



Check your sand filter for mud balls and cracks. Clean your sand or repair backwash equipment where needed.



Simmonds & Bristow
The Regional and Remote Water Specialist

simmondsbristow.com.au